

UNIVERSAL RECEIVER GE-RCV1

Instruction

Technical features:

| | |
|---------------------|--------------------|
| Frequency: | 433,92 MHz |
| Code: | rolling code |
| Number of channels: | 3 |
| Power supply: | 12/24 Vac/Vdc |
| Working current: | max. 50 mA |
| Memory: | 30 remote controls |

Works with:

Beninca, BFT Mitto, CAME Space, DEA Mio, DTM, FAAC Fix, FAAC Lc, Hato, NICE Smilo, Normstahl, Wiśniowski.



Hold the Learn button for at least 3 seconds before the light comes on

Learning a code

Press and hold learning button (1), when the red LED light (2) is on, release learning button (1), then press any keys of the remote twice. The LED light (2) is off and then flashes - indicates that the code is learned successfully. Repeat this process to learn the second code.

Hold the Learn button for at least 10 seconds for it to erase every thing
Deleting existing codes

Press and hold the learning button (1), the red LED light (2) is on, don't release this button (1) until the red LED light (2) is off - this indicates that all the codes have been deleted.

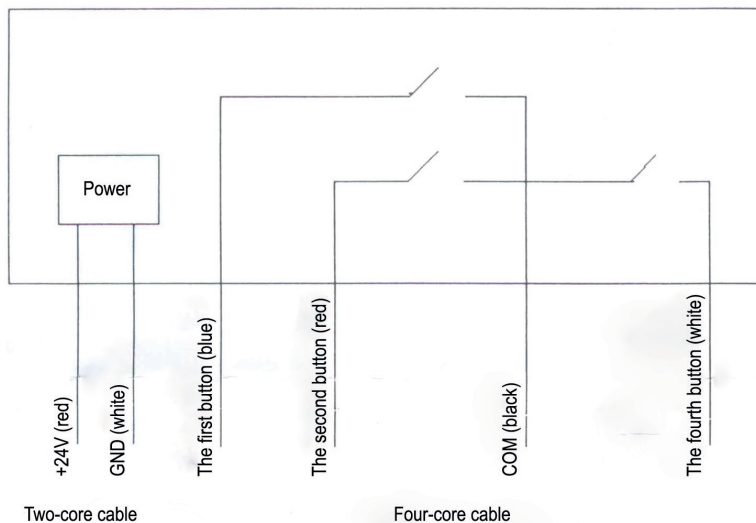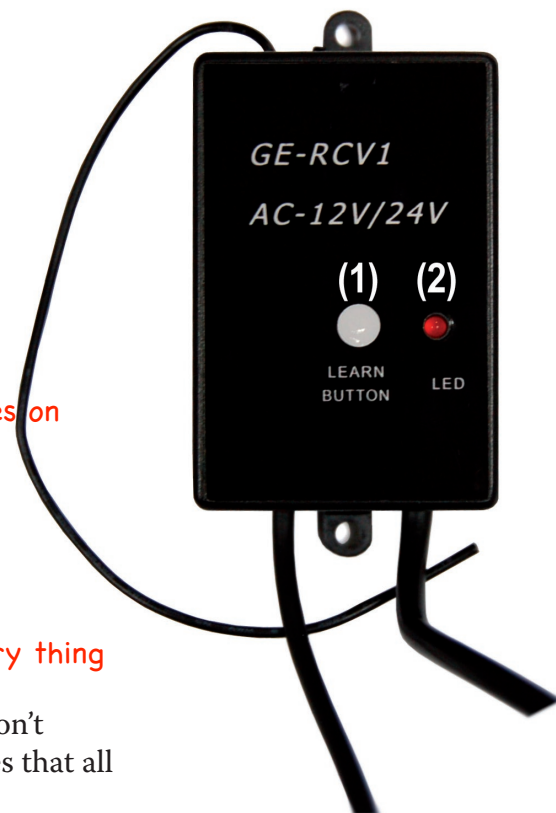

Reference to the following **wiring diagram**:

3 channel relay correspond the first, the second and the fourth button of the remote.